



Prowler Deck Level Adjmnts

Details:

To adjust the deck height, remove the clevis pin from the lift spring rod. This may be accomplished by moving the lift arm to a point that relieves the pressure off the pin. (See Fig. 2)

To raise the deck, thread the back of the spring rod clockwise. To lower the deck, turn the spring rod counter-clockwise (Note: That when changing the length of the spring rod, do so in two turn increments). At this time also inspect the bushings or washers, at the base of the spring (by the spring bolt) and check for binding.

Reassemble the spring rod and replace the clevis pin. Now move the deck up and down and recheck the side to side blade measurement.

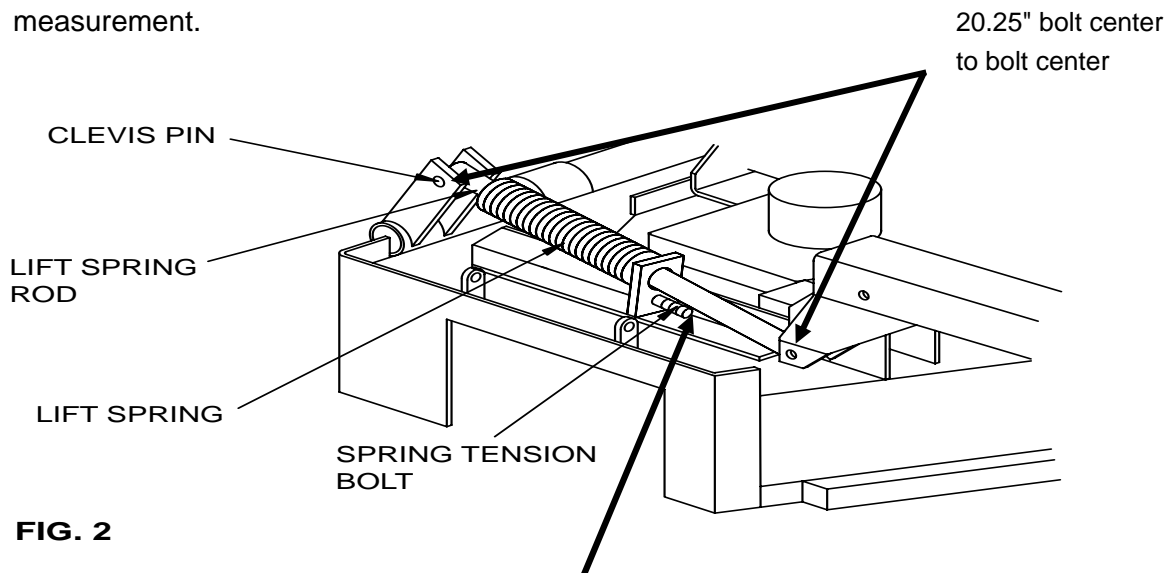


FIG. 2

Spring tension bolt must be tightened all the way.