



# SERVICE BULLETIN

**Date:** 8/24/2005


**Number:** SB0506

**Subject:** Spring Tension Adjustment on Z42, Z48, Z52, and 52 X-treme

---

---

**Details:** When replacing the blade drive belt or simply adjusting the blade drive belt tension, do NOT exceed 5-1/2" of "spring stretch" measuring from coil to coil. The diagram below will illustrate where to measure the "spring stretch."

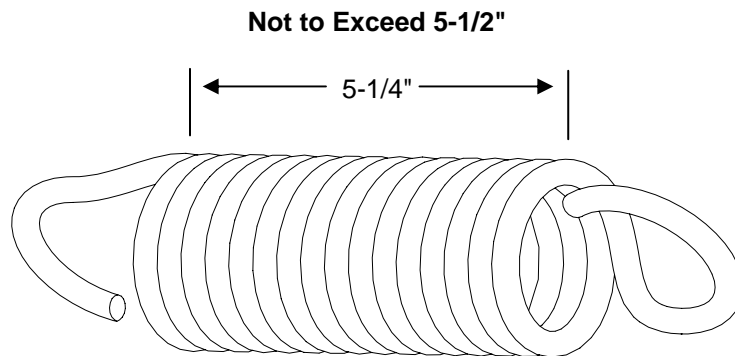

Measuring the "spring stretch" also applies when setting up new equipment.