




Electric Start Parts for Encore Walk-Behind Units

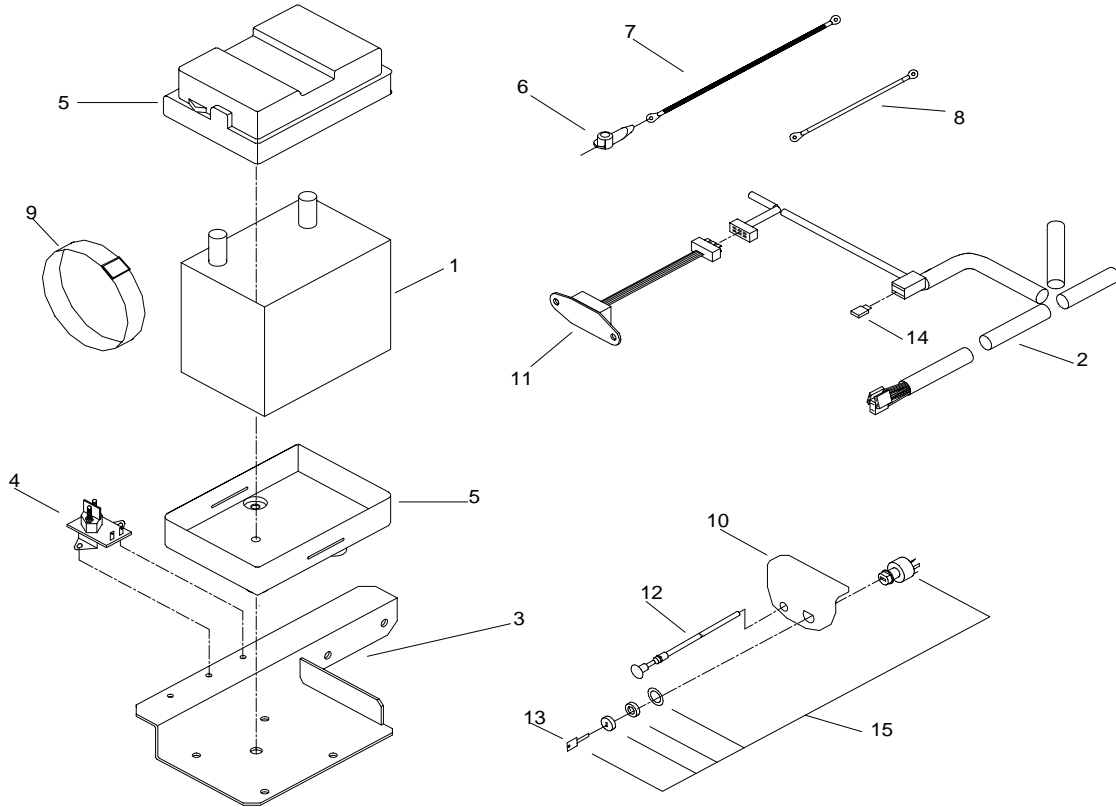

Parts List

#	Part #	Qty	Description
1	423142	1	Battery
2	363344	1	Wire Harness
3	322017	1	Battery Mount Brkt.
4	423017	1	Starter Relay
5	363345	1	Battery Case Set
6	423158	3	Terminal Insulator
7	423118	1	Negative Cable
8	423116	1	Positive Cable - Short
	423117	1	Positive Cable - Long
9	363349	1	Battery Belt
10	363341	1	Switch Angle
11	423030	1	Safety Module
12	423153	1	Choke Cable (Vanguard)
	523027	1	Choke Cable (12hp)
13	423209	1	Service Ignition Key
14	423145	1	20 amp Fuse
15	423027	1	Ignition Switch Assy