



# Walk-Behind Height Adjustment

## Details:

The height of cut for the Encore Walk-Behind can be achieved by adjusting one or a combination of the three following components:

- 1) Blade Spacers
- 2) Caster Arm Spacers
- 3) Rear Deck Mount

### With deck mounted in highest position:

5 caster arm spacers on top of caster arm = 1-7/8" to 3-1/8"  
4 caster arm spacers on top of caster arm = 2-1/8" to 3-3/8"  
3 caster arm spacers on top of caster arm = 2-1/2" to 3-3/4"  
2 caster arm spacers on top of caster arm = 2-5/8" to 3-7/8"  
1 caster arm spacers on top of caster arm = 2-7/8" to 4-1/8"  
All caster arm spacers under caster arm = 3-1/4" to 4-1/2"

### With deck mounted in lowest position:

5 caster arm spacers on top of caster arm = 1-1/2" to 2-3/4"  
4 caster arm spacers on top of caster arm = 1-3/4" to 3"  
3 caster arm spacers on top of caster arm = 2" to 3-1/4"  
2 caster arm spacers on top of caster arm = 2-3/8" to 3-5/8"  
1 caster arm spacers on top of caster arm = 2-5/8" to 3-7/8"  
All caster arm spacers under caster arm = 2-7/8" to 4-1/8"

**\*\* Note: Use 1/4" blade spacers to achieve cutting height between the above measurements.**

