


X-treme Series Riders Hydro Pump Adjustments

RTN Spring, part # 423378

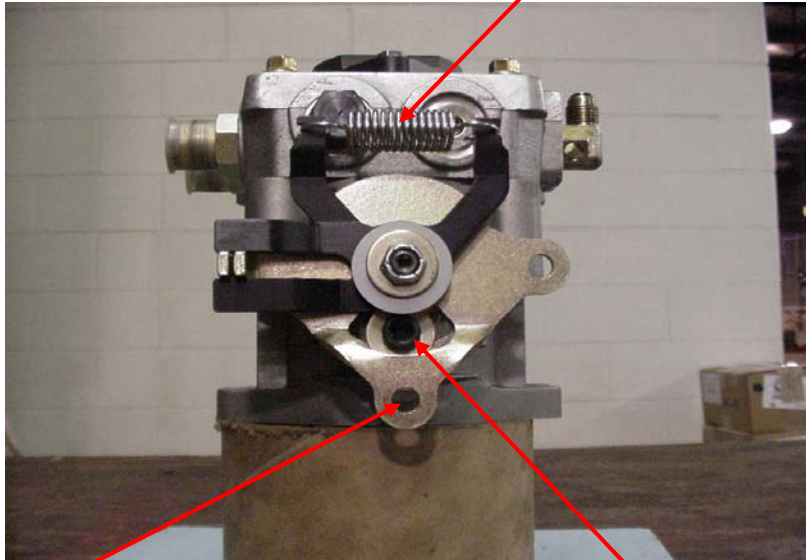

The linkage rod from the steering lever attaches to the pump here. When the pump is in neutral, the length of the linkage rod should be such that it is able to connect to the steering lever with the steering lever in its neutral position.
Note: The length of the linkage rod is not to be altered for adjusting the tracking setting.

Allen-Head Bolt for adjusting neutral setting on pump.

The spring on the RTN (Return to Neutral) assembly should automatically bring the pump to its neutral setting. If the RTN Assembly is out of adjustment, simply loosen the allen-head bolt and rotate the whole RTN Assembly until you find the pump's neutral position.

Tracking may be adjusted by altering the length of the "stop bolt" found at the bottom of the steering control lever underneath the steering lever control box.