

## Z34 Brake Adjustment

**Details:**

The brake cable tension must be adjusted so as to actuate the brake rods when the brake lever is engaged. The brake cable tension may be adjusted by loosening the lock nuts on the retaining bracket (see diagram).

After the proper tension is set on the brake cable, the clamp collar must be adjusted correctly in order to allow the spring tension to hold the brake in the "on" position. The correct positioning of the clamp collar is 1/8" to 1/4" gap between it and the swivel (as shown in diagram) when the brake is in the "on" position. The spring tension may be increased by tightening the nyloc nut on the end of the brake rod.

