




Z34 Handle Instructions

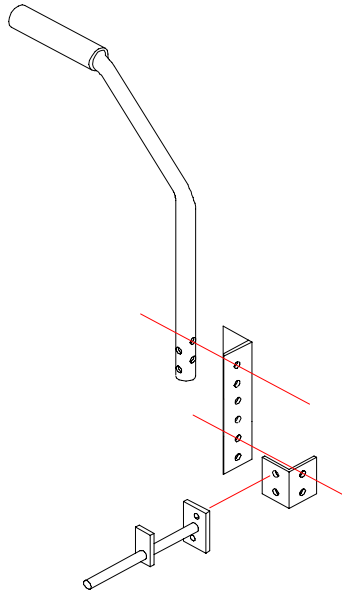

- 1) Picture shows RH control lever. LH lever is assembled opposite.
- 2) Install handle-angle to angle-bracket using two 5/16-18x3/4 HHCS and two 5/16 whizlock nuts.
- 3) Install control lever to handle-angle using two 5/16-18x1 1/2 HHCS and two 5/16 whizlock nuts in upper or lower holes of the handle-angle according to user preference.
- 4) Control levers may be adjusted in/out and forwards/backwards using the lower angle-brackets.

Parts List

Qty	Part #	Description
2	342076	Control Lever w/ Grip
2	343151	Handle-Angle
4	100271	5/16-18x3/4 HHCS
4	100275	5/16-18x1 1/2 HHCS
8	109001	5/16-18 Whizlock Nut