

50" & 60" Arrow Fuel Filter Relocation



A Original fuel filter Location. Remove two fasteners holding expansion tank using a 10mm wrench.

B Pull expansion tank away from frame. Pull fuel filter and hose between expansion tank and frame.

C With fuel filter in new location, re-attach expansion tank. Use care not to pinch any hoses or cables when re-fastening.

