


61" FC Electric Lift Kit Installation Instructions

Part # 582218

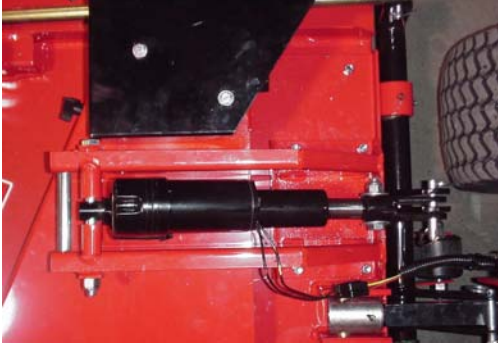

Remove height adjustment bracket and replace with 582178 electric lift mount.

Line the existing four holes up with the inside holes of the mount. Mark the outside holes and drill 1 1/32" holes. Mount the bracket to the deck using the 5/16 x 1-1/2 carriage bolts for the pre-existing holes and use the 5/16 x 1-1/2 HHCS for the drilled holes. The spacer plates fit between the deck and the mount bracket.




Mount the 583294 actuator to the electric lift mount using one 1/2 x 7-1/2 HHCS.

Support the electric lift mount by installing the brace tube, part # 583240, using the 3/8 x 5 HHCS and 3/8 nyloc nut.



Attach ram weldmts to actuator using 1/2 x 2-1/2 HHCS and 1/2 nyloc nut.

Attach the ram weldmts to the deck tube using existing ring pin.

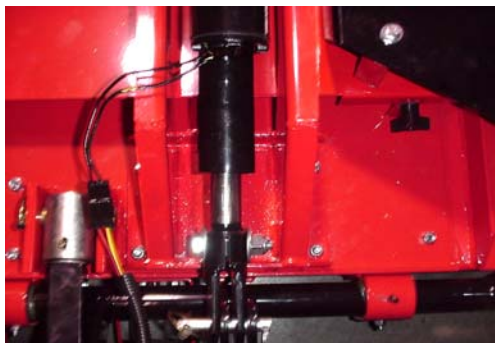

Route the 583412 electric lift harness through the side frame channel to the fender and seatframe.



You will need to drill a 1/2" hole in the RH fender to mount the 583411 lift switch.



Mount the relays and fuse box to the seatframe as shown here.

QTY	PART #	DESCRIPTION
1	582178	ELECTRIC LIFT MOUNT - FC
3	583522	FC SPACER BLOCK
1	583294	ELECTRIC ACTUATOR
2	582180	RAM WELDMENT - FC
1	100331	1/2 - 13 X 2 1/2 HHCS
1	100342	1/2 - 10 X 7 1/2 HHCS
2	104259	1/2 - 13 NYLOC NUT
1	583240	BRACE TUBE
1	100306	3/8 - 16 X 5 HHCS
1	104257	3/8 - 16 NYLOC NUT
2	100275	5/16 - 18 X 1 1/2 HHCS
4	107520	5/16 - 18 X 1 1/4 CARR BOLT
6	104256	5/16 - 18 NYLOC NUT
1	583412	ELECTRIC LIFT HARNESS
1	583411	ELECTRIC LIFT SWITCH
1	104755	1/2 - 20 JAM NUT
1	583232	DECAL - UP - DOWN
2	583351	RELAY - ELECTRIC LIFT
1	583238	RELAY MOUNT