

SERVICE BULLETIN

Date: 3/31/2003

Number: SB0302


Subject: Weight Kit for New Design Z42 and Z48

Details:

The new design Z42's and Z48's now have rigid front axles (non-articulating). Therefore, when installing the front weight kit in conjunction with the Z-Rider Grass Catcher, you will need to order **weight bracket kit, part # 522169, and weight kit, part # 821017.**

This change affects Z42's and Z48's with serial # 43664 and above.

The diagram below shows the installation instructions for these kits:

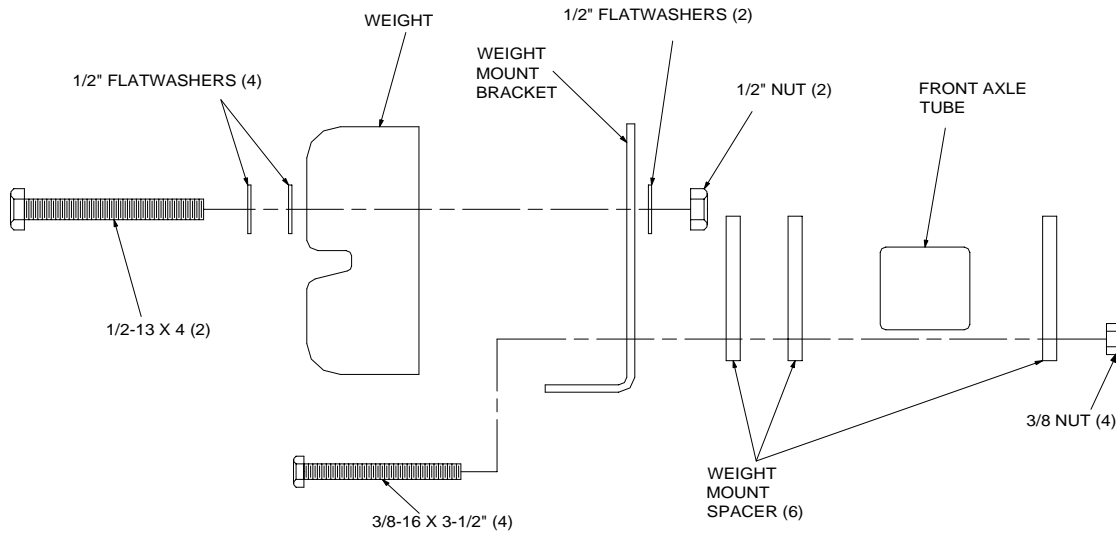

- 1) Using the 3/8x3 1/2 HHCS, bolt together the weight mount bracket (part # 523502) and weight mount spacers (part # 523504) onto the front axle as shown in diagram.
- 2) Place weight (part # 823281) onto weight mount bracket and secure into place using 1/2x4 HHCS, 1/2 Std Flat Washers, and 1/2 Nyloc Nut as shown in diagram.

Parts List for 522169 Bracket Kit

Part #	Qty	Description
523504	6	Weight Mnt Spacer
523502	1	Weight Mnt Bracket
100302	4	3/8-16x3 1/2 HHCS
104257	4	3/8 Nyloc Nut

Parts List for 821017 Weight Kit

Part #	Qty	Description
823281	1	Weight
100335	2	1/2-13x4 HHCS
104259	2	1/2-13 Nyloc Nut
105264	6	1/2 Std Flat Washer