



SERVICE BULLETIN

Date: 8/16/1995


Number: SB9508-16

Subject: Final Adjustment on Belt-Drive Walk-Behinds

Details:

When making the final adjustments on thumb locks, make certain that there is 1/4" to 3/8" clearance between the drive rod and the bottom of the thumb lock. After setting the clearance, lock the thumb lock into the neutral position and adjust the brake so that there is a slight resistance. Replace swivel into idler and replace hairpin cotter.

With thumb lock still in neutral position, you should be able to roll the mower freely. Now rotate the thumb locks all the way back. The brakes should now hold the mower from moving. This is the park position or the way to engage the parking brake.

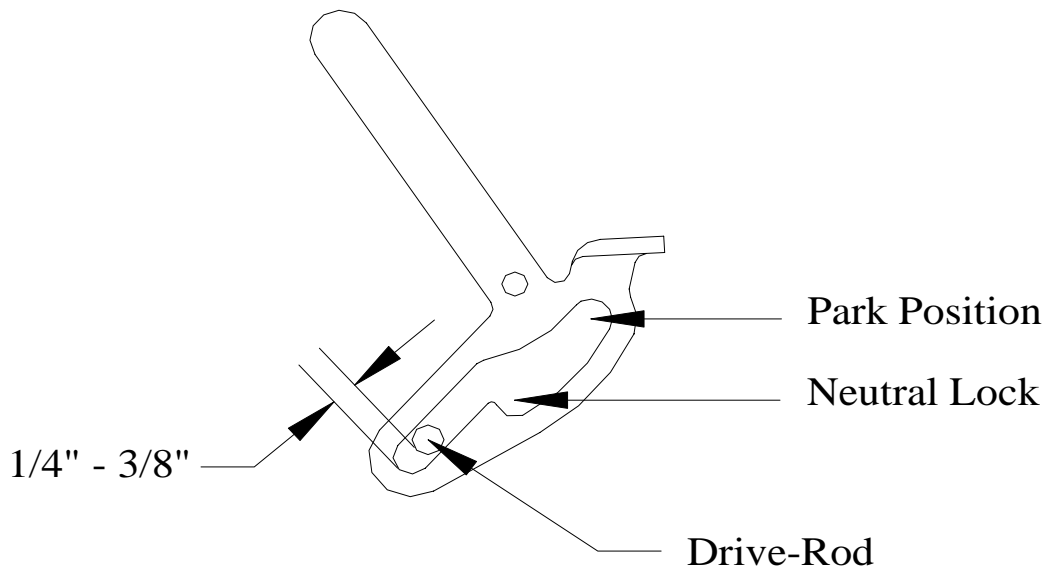

Thank you,
Encore Service Department