




SERVICE NOTICE

Date: November 27, 2002

Number: SN0201

Subject: Shortening PTO Shaft

Procedure for Shortening PTO Shaft on Prowler Midcut

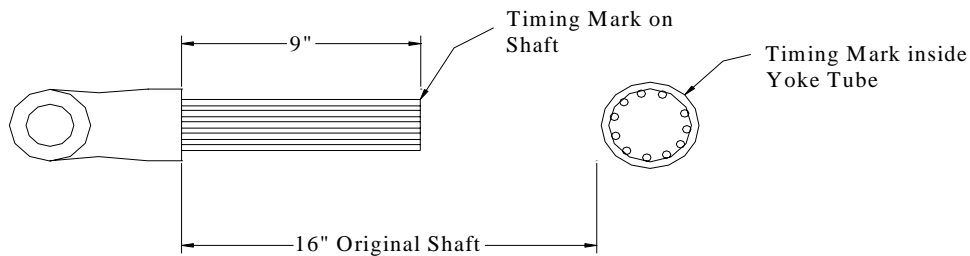

Original shaft splines are 16". Locate the timing mark on the splined shaft and measure back 7". Mark the shaft by crimping or spot-welding the timing splines so as to relocate timing splines after cutting off shaft. Cut shaft off leaving the remaining shaft 9" long. When cutting off shaft, make certain not to destroy the crimp or weld you made to discern the timing splines on the remaining shaft.

Shortening the PTO shaft is done on **Midcuts** only below serial #'s 40358. Units with serial #'s 40359 and above already possess the shorter splined shaft (part # 593064). When replacing a complete shaft on **Midcut** Prowlers, please order part # 593064.