


# FILTER KIT INSTRUCTIONS

THE HYDRAULIC OIL FILTER MUST BE RELOCATED TO ACCOMMODATE THE VERTICAL TUBE OF THE NEW FOLDING ROPS.

A NEW FILTER HEAD, FILTER, ADAPTERS AND HOSES ARE SUPPLIED TO ACCOMPLISH THIS RELOCATION.

TWO NEW HOSES ARE REQUIRED FOR THE MOUNTAIN LION PROWLER. ONLY ONE NEW HOSE IS REQUIRED FOR ALL OTHER MC PROWLERS.

SEE PHOTOS ON OTHER SIDE →

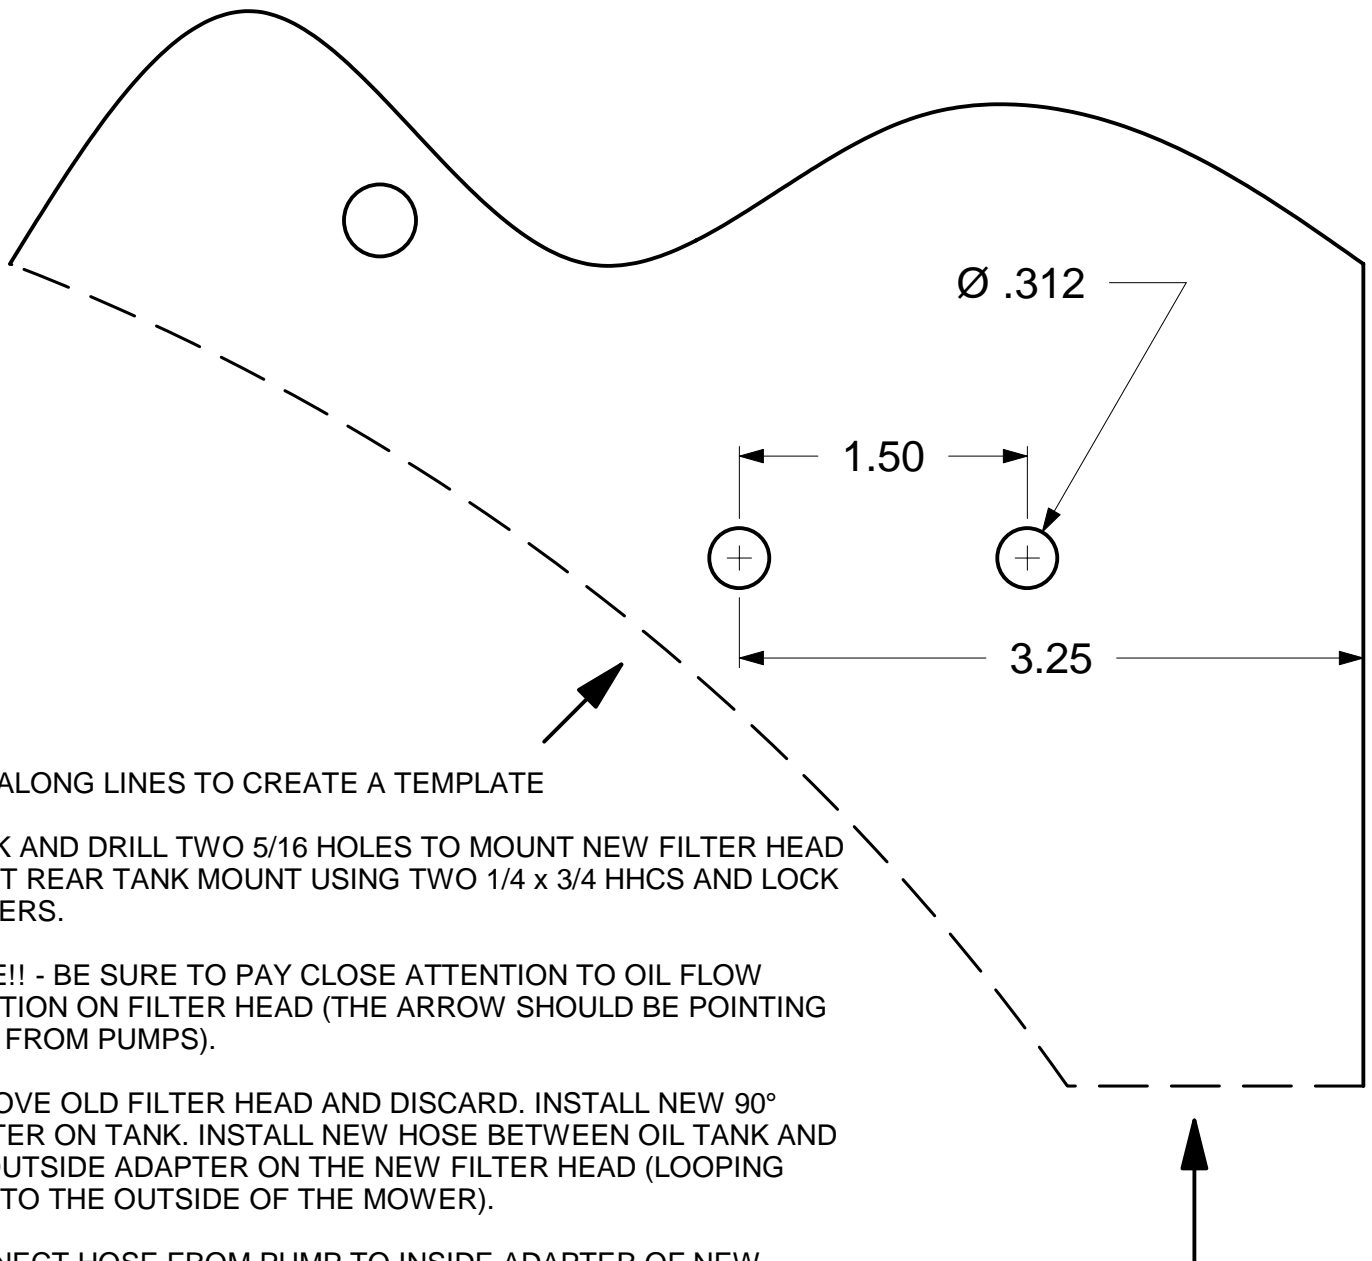

- CUT ALONG LINES TO CREATE A TEMPLATE

- MARK AND DRILL TWO 5/16 HOLES TO MOUNT NEW FILTER HEAD IN LEFT REAR TANK MOUNT USING TWO 1/4 x 3/4 HHCS AND LOCK WASHERS.

- NOTE!! - BE SURE TO PAY CLOSE ATTENTION TO OIL FLOW DIRECTION ON FILTER HEAD (THE ARROW SHOULD BE POINTING AWAY FROM PUMPS).

- REMOVE OLD FILTER HEAD AND DISCARD. INSTALL NEW 90° ADAPTER ON TANK. INSTALL NEW HOSE BETWEEN OIL TANK AND AND OUTSIDE ADAPTER ON THE NEW FILTER HEAD (LOOPING HOSE TO THE OUTSIDE OF THE MOWER).

- CONNECT HOSE FROM PUMP TO INSIDE ADAPTER OF NEW FILTER HEAD (USE THE OTHER NEW HOSE ON MOUNTAIN LION PROWLER)