



SERVICE BULLETIN


Date: 2/23/1995

Number: SB9523-20


Subject: Thumb Latch on Encore Hydro Walk-Behinds

Details:

It may be possible that a few of the Hydro's may have been sent out with the old belt-drive thumb latch. Please check your upper handle assy to see that the right one has been installed. Refer to the example below. If you have the wrong latch, you will have difficulty setting neutral without going to reverse when going to neutral with the thumb latch.

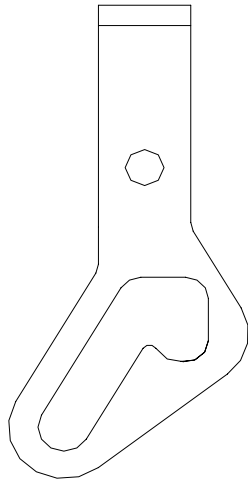

"Old" Belt Drive

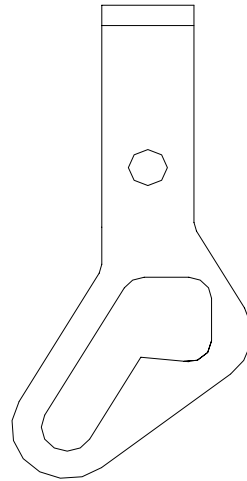

Hydro Drive

Thank you,
Encore Service Department