



**32" & 36" COMPACT STANDON  
REMOTE DISCHARGE CHUTE (RDC)  
PARTS & INSTALL INSTRUCTION MANUAL**

---


## INSTALLATION

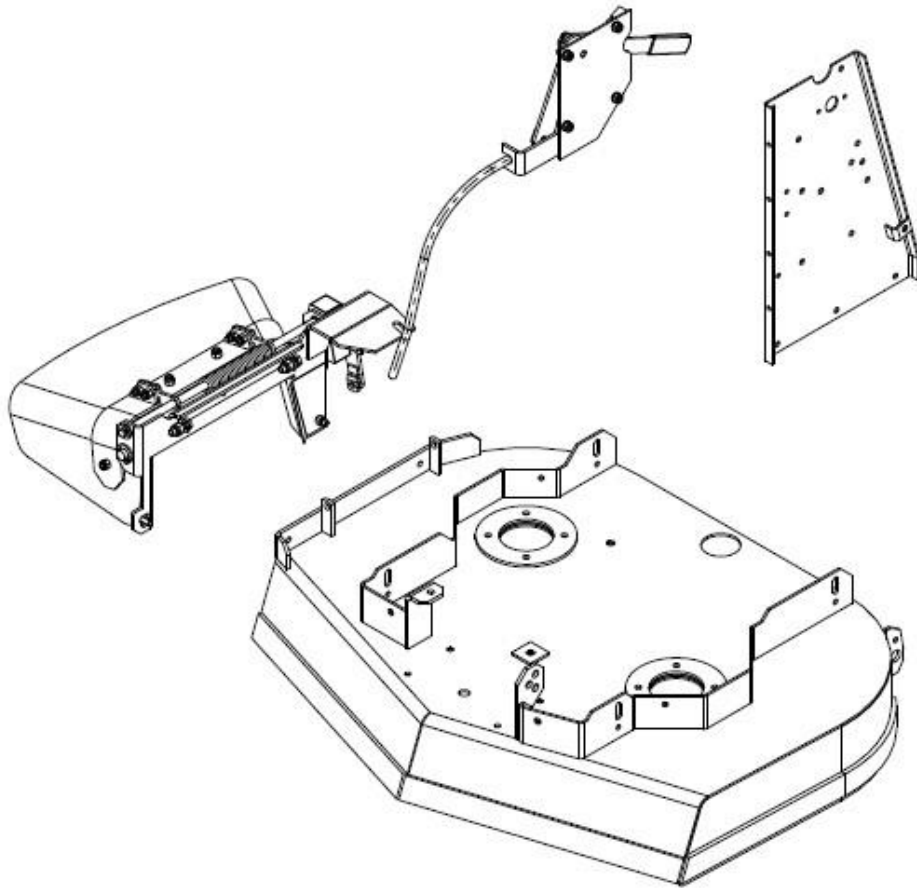

- 1. Remove the discharge deflector chute, (retain the hardware).**
- 2. Attach the RDC chute assembly to the discharge opening, using the retained hardware and the hardware supplied (4 plcs).**
- 3. Assemble the RDC lever to the right side of the upper frame, using hardware supplied (4 plcs).**
- 4. Attach the RDC cable to the chute assembly.**
- 5. Adjust the conduit of the cable at either end to achieve desired RDC function.**

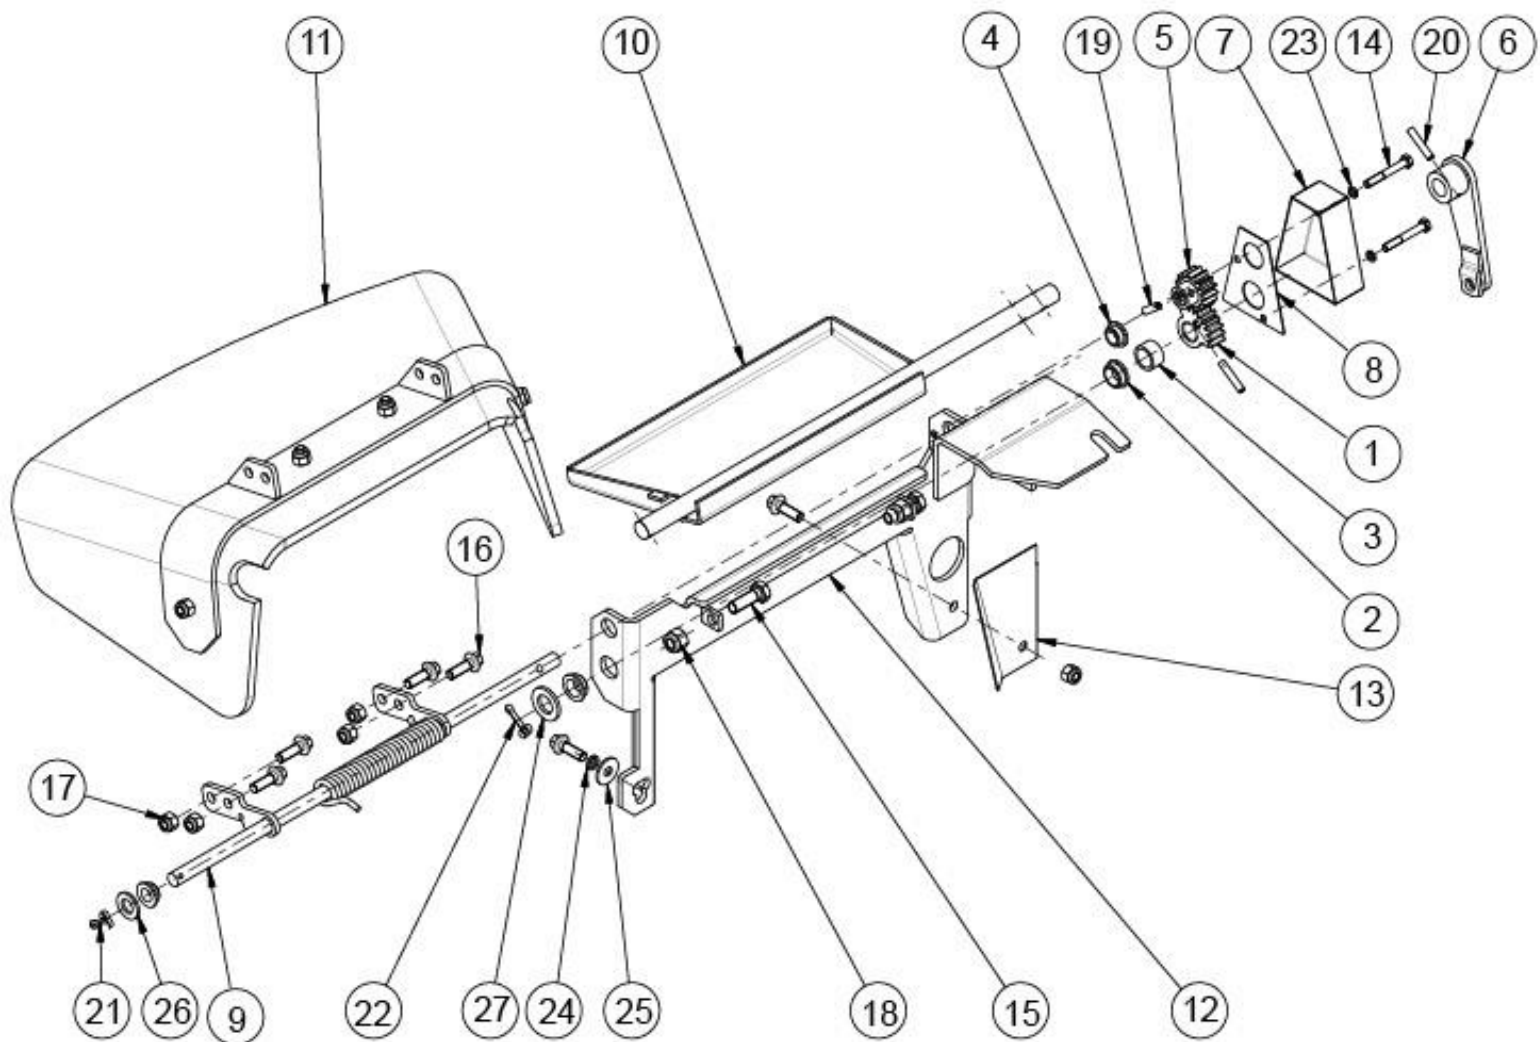

<b>ITEM</b>	<b>PART NO.</b>	<b>DESCRIPTION</b>
1	3602666	BIG GEAR
2	3602673	BUSHING
3	3602676	BUSHING
4	3602677	BUSHING
5	3602792	GEAR
6	4806627	LEVER, GEAR SHAFT
7	5201155	COVER, GEAR
8	5201158	PLATE, GEAR SUPPORT
9	5201320	BRACKET, TORSION SPRING
10	5201330	DOOR, DISCHARGE
11	5201340	DEFLECTOR, DISCHARGE
12	462167-2	WLD, BRACKET, DOOR SUPPORT
13	463324-2	GATE, REAR RDC
14	B5782-645	HEX HD BOLT M6 X 45
15	B5783-1030	HEX HD BOLT M10 X 30
16	B5787-825	SCREW, HH FLANGE M8 X 25
17	B6182-8	NUT, NYLOC M8
18	B6182-10	NUT, NYLOC M10
19	B879-622	ROLL PIN 6 X 22
20	B879-630	ROLL PIN 6 X 30
21	B91-420	COTTER PIN, 4 X 20
22	B91-425	COTTER PIN, 4 X 25
23	B93-6	LOCKWASHER 6
24	B93-8	LOCKWASHER 8
25	B96-8	WASHER 8
26	B97.1-12	WASHER 12
27	B97.1-16	WASHER 16

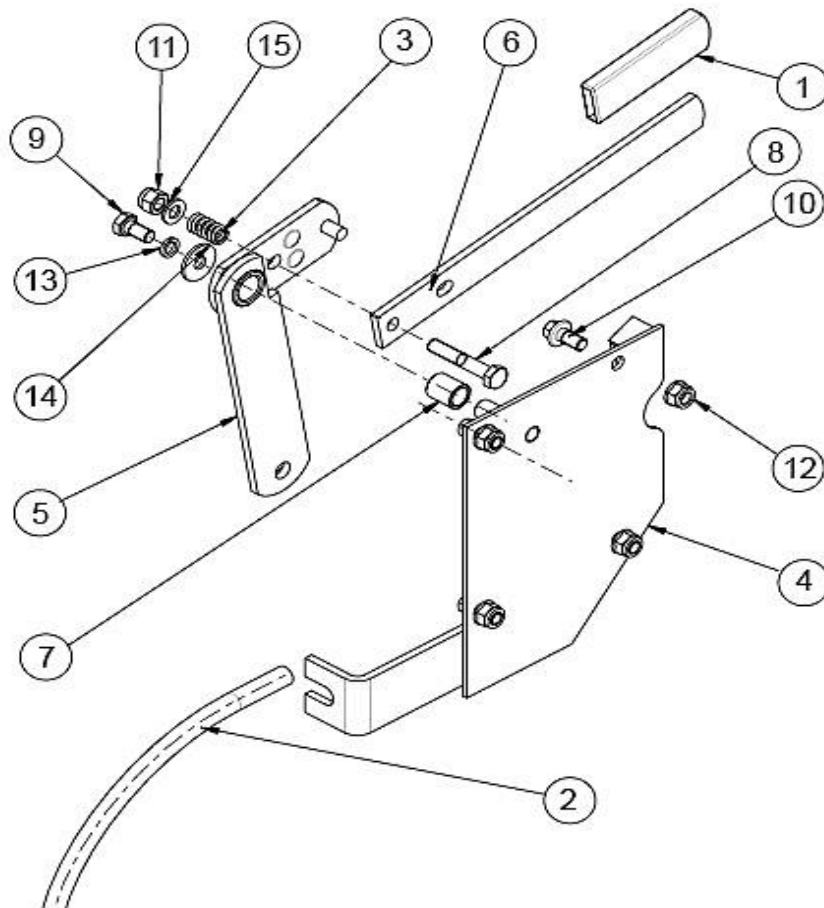

ITEM	PART NO.	DESCRIPTION
1	363022	ADJ. LEVER GRIP
2	463319	CABLE, 36 SO RDC
3	3603204	COMPRESSION SPRING
4	462162-2	WLD, 36 SO RDC HANDLE BRACKET
5	462163-2	WLD, 36 SO RDC HANDLE CRANK
6	463318-1	HANDLE, 36 SO RDC
7	B2685-121618	OILITE BRONZE BEARING 12 X 16 X 18
8	B5782-845	BOLT M8 X 45
9	B5783-816	SCREW, HH TAP M8 X 16
10	B5787-816	SCREW, HH FLANGE M8 X 16
11	B6182-8	NUT, NYLOC M8
12	B6187-8	FLANGED TOPLOCK M8
13	B93-8	LOCKWASHER 8
14	B96-8	WASHER, FLAT 8
15	B97.1-8	WSHER 9

**WORL DLAWN POWER EQUIPMENT, INC.**

**401 COMMERCE STREET BEATRICE,**

**NE 68310**

**800-267-4255**

**FAX – 402-223-4103**

ALL RIGHTS RESERVED  
CONTENTS SUBJECT TO CHANGE

RDC 933290  
202003